

Bauder Inspection Chamber ALU 250

Installation


BAUDER

Position the chamber over the rainwater outlet and surround with 20/40 mm pebble vegetation barrier. Place the inspection chamber directly on top of the drainage / water storage board, making sure that you first cut out the opening in the board beneath to ensure free-flow of water to the nearest outlet. On Inverted roofs with paving / ballast finish, position the chamber directly on to the protection layer.

Inspection Chamber and related components:




The lid connects by first locating the hinge tabs to the corresponding slots in the chamber body. The lid is secured by a quarter turn of the 'quick lock'. This can be done manually, but a small coin or screw driver will be required to open the lock to gain access to the chamber.

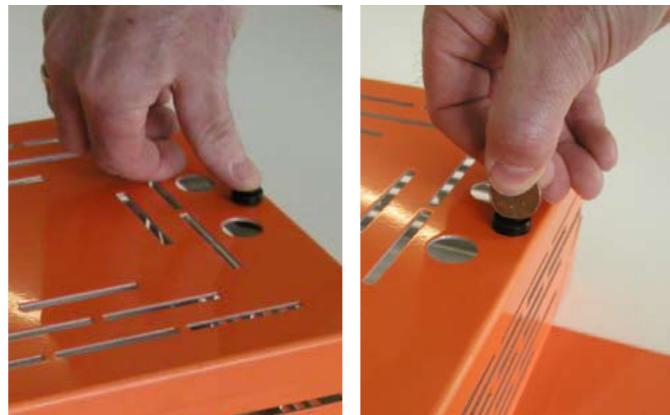

Height adapter units: slide into position diagonally to interlock edges and secure with 'quick lock'.



When used at abutments only:

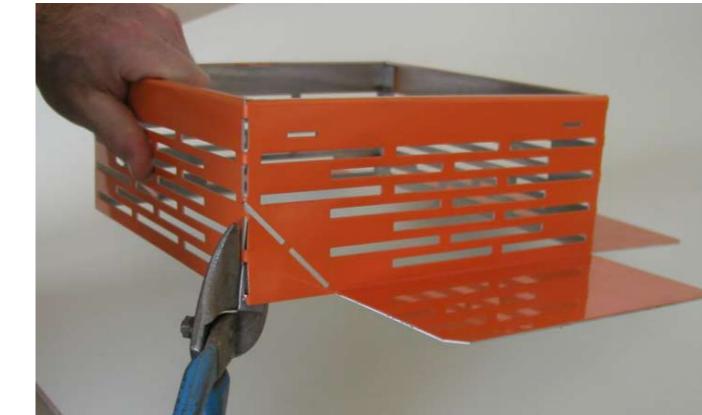

Cut away perforations (as shown) and bend tabs to allow clearance for angle fillets. Finally, fold rear panel (as shown) to clear the angle fillet and prevent exposure of any sharp edges.

